

# Low Voltage Lights by *Aurora* <sup>\*</sup>


## DECK LIGHTING

### Before You Start

- Read and Understand the instructions completely.
- Be sure electrical current is turned off.
- If you have any doubts about how to install fixture, please contact an electrical contractor.

### Installation

1. Connect Deck light only to a 12 volt power source.
2. Connect wires from "12 volt supply line" to the Deck light (Push connectors together, if using the DLE4410.19) or if using standard wire attach with wire nut.
3. Attach Deck light to post using screws provided.
4. The Deck light includes (1) 12 Volt, 1.6 Watt Led Bulb or panel (for most lights).
5. Turn on power to confirm light is on

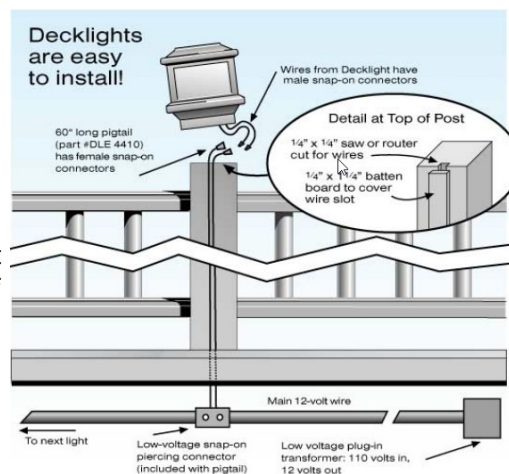

**Main low voltage wire:** Be sure to use a minimum of 12-gauge, UV protected, exterior grade wire. To determine the amount of wire required, measure the distance from the furthest light, in series, back to where the transformer will be mounted. Each light is wired "daisy chain" style to the main low voltage wire, using the DLE4410.19 pigtail. The wire is typically sold in 100', and 500' coils. The wire can be run above ground, under the joist or under the handrail, through the vinyl, or under ground. It is low voltage, so it need only be buried 3" or so underground. Wiring should not exceed 200' runs. If 200+ feet is required, please refer to transformer instruction sheet for additional wiring options.

**Transformer:** Transformers are specified per the installation. Always size the transformer as close as possible to the required wattage draw, without going over. The wattage output of the transformer is important; you do not want too much or too little output on the transformer. To **determine the size of the transformer**, add up the total number of light-watts. This is the wattage of the fixture times the number of fixtures. Example: 6 each RLA6040 = 6 lights x 1.6 watts = 9.6 watts. Then select the next larger size transformer, in this example 12 watts (1 Amp) DC transformer. With a switched exterior outlet your transformer can be controlled from indoors.

### FREQUENTLY ASKED QUESTIONS:

- **How many lights can I install on a transformer?** Up to 30 lights. See transformer section. For further detail, read the transformer instruction sheet included with the transformer.
- **How do I install wire in a wood post?** Simply cut or route a channel vertically on the face of the post. Once wire is installed, cover with a batten strip or cut a filler piece to match the slot size. Additionally, the wire can run under the handrail. In this application, drill a hole from the top of the 4x4, on an angle, to meet the underside of the handrail. Run wire from post to post, under the handrail.
- **Can I put the lights on an inside switch?** Yes. To do so, the outlet that the transformer plugs into must be wired to the desired switch.
- **Can the light output be reduced on the low voltage light?** A Dimmer is available for use with our DC Transformers that can be used to dim the output of our LED lights.
- **Some lights appear dimmer than others, what do I do?** This is a result of wiring issues. Primary due to longer distances from the transformer (200 or more feet Depending on the Gauge or main wire used for the lights). There are several different wiring schemes to address and/or correct this. Please refer to the transformer instruction manual to correct.

# Low Voltage Lights *by* **Aurora** DECK LIGHTING

## Warranty Information

**Unless otherwise noted, all Aurora Deck Light products are covered by a one-year limited warranty.**

Aurora Deck lights warrants this product against defects in materials or workmanship as follows:

For the first year from the date of purchase, Aurora Deck lights will repair or replace the unit, at our option, without charge for parts or labor. After the indicated period of one year, the product owner is subject to pay repair and parts fee.

This limited warranty is non-transferable, and consequently only valid toward the purchaser of this product. It does not cover damage or failure caused by or attributable to natural disaster, abuse, misuse, improper or abnormal usage, faulty installation, improper maintenance, lightning, or other incidences of excessive voltage, or any repairs or tampering by other than by Aurora Deck lights or its Authorized Service Center. Repair or replacement under the terms of this warranty does not extend the terms of this warranty.

Should this product be proven defective in workmanship or material, the consumer's sole remedies shall be such repair or replacement as provided by the terms of this warranty. Under no circumstances shall Aurora Deck lights be liable for any loss or damage, direct, consequential, or incidental, arising out of the use of or inability to use this product. Some states do not allow limitations on how long an implied warranty lasts or the exclusions or limitations of incidental or consequential damages, so the above limitations or exclusions may not apply to the product owner. This warranty gives the product owner specific legal rights. The product owner may also have other rights, which vary from state to state.

To obtain warranty service, contact Aurora Deck lights Service Department at **1-800-603-3520**. When returning a unit for warranty service, the product owner must obtain a return merchandise authorization number from a service representative of Aurora Deck lights. In addition, please include a copy of the product owner's sales receipt, a brief description of the symptoms, name, address, and phone number. Then deliver or ship the product, postage or shipping costs prepaid (insurance suggested), to:

**Aurora Deck Lights**  
960 E Milwaukee Street  
Whitewater, WI 53190

All warranty repair or replacement will be returned to the customer using UPS® Ground service or other carriers at our option. If a faster carrier method is requested, the product owner must pay the cost difference over the UPS® Ground service charge. Aurora Deck lights is not liable for products lost or damaged during shipment.